

AUDIO - AMPLIFIER	
Denon	32706, 32134
Durabrand	31568
Halcro	31934
Harman/Kardon	30892, 33045
Left Coast	30892
Marantz	32138, 30892, 31892
Memorex	31568
Optimus	30823
Parasound	31934
Philips	30892
Pioneer	30823
Polk Audio	30892
RCA	30823
Regent	31568
Sony	33903
Denon	32706, 32134
Durabrand	31568
Halcro	31934
Harman/Kardon	30892, 33045
Left Coast	30892
Marantz	32138, 30892, 31892
Memorex	31568
Optimus	30823
Parasound	31934
Philips	30892
Pioneer	30823
Polk Audio	30892
RCA	30823
Regent	31568
Sony	33903
AUDIO - ACCESSORY	
Apple	31115
AudioSource	33721
B & W	33943
Bose	33708
Boston Acoustics	33698
Bowers & Wilkins	33943
Curtis	33942
Definitive Technology	33645
Denon	32502
Dynavox	33231
Haier	33516

Harman/Kardon	33517
iLive	33175
Insignia	33951
JBL	33756, 33535
JVC	33049
Klipsch	33915
LG	33217, 33996
Martin Logan	33526
Onkyo	33984, 33992
Panasonic	33323, 33409
Philips	33962, 32675, 33282, 34012
Pinnacle Speakers	33774, 33728
Pioneer	33956
Polk Audio	33429
Proficient	33661
RCA	33969
Samsung	32660, 32609
Sharp	33736, 33097
Sonos	33919
Sony	33700, 32610
SpeakerCraft	33661
Toshiba	33627
VIZIO	32454
Yamaha	32458, 32021, 33153, 33917
ZVOX	32332, 33913, 32334
AUDIO - RECEIVER	
Aiwa	30121, 31641, 30158, 30189
Alco	31390
AMC	31077
Anthem	33294
Anthem Statement	33294
Arcam	31189, 30189
Audiotronic	31189
Audiovox	31390
Bose	31933, 31629, 33959
Carver	30189, 30121, 31189
Coby	31389, 32748, 33218
Curtis	31389
Denon	32857, 31360, 32516, 33347, 32820, 32279

Dynex	32971
Epworth	30121, 31641, 30158, 30189
Gateway	31517
GE	33297
General Electric	33297
Harman/Kardon	32241, 31304, 32443, 33418, 30189, 32670
Insignia	32175, 31030, 32169, 32472, 32929, 32966, 33210, 31077
Integra	31805, 32730, 31320, 32503, 30135, 31298
JBL	32241
Jensen	31389
JVC	31676, 32040, 31374, 32331, 32239, 31871, 33115, 33274
Kenwood	31570, 31313, 30186, 31293
KLH	31390
LG	32197, 32676, 32284, 33285, 31293
Linn	30189
Magnavox	30189, 31189, 31831
Marantz	31289, 32114, 30189, 31189
McIntosh	31289
Micromega	31189
Myryad	31189
Nakamichi	31313
Norcent	31389
Nova	31389
Onkyo	31805, 31320, 32730, 32503, 30135, 31298
Optimus	31023, 30186
Panasonic	32967, 31275, 31288, 31633, 32452, 33055, 33309, 31763, 32745, 32105, 31308, 31676
Philco	31390, 31831
Philips	30189, 32459, 31831, 32289, 31266, 32311, 31189

Pioneer	31123, 31935, 31384, 32432, 31023, 32612
Polk Audio	31289, 30189
Proscan	31254
RCA	31254, 32041, 32611, 32426, 33297, 32655, 31123, 31390, 32719, 33281, 31023
Samsung	31868, 32809, 33154, 32137, 31500, 31304
Sansui	30189
Sharp	30186
Sherwood	31077, 31905, 31517, 32169, 33120
Sherwood Newcastle	32169
Sony	31622, 31759, 30158, 32172, 31758, 31822, 32475, 31058, 32522, 32860, 33257, 33372, 33456
Stereophonics	31023
Sunfire	31313
Teac	31390
Technics	31308, 31633
Thorens	31189
Toshiba	31788, 31123
Venturer	31390
Vtrek	32426
Wards	30158, 30189
Yamaha	32061, 32467, 33030, 30176, 31276, 30376, 33580, 31815, 31376, 30186
Zenith	31293, 32197
TELEVISION	
888	04159
Acer	01339, 04143
Admiral	04030, 03485, 04111, 00093, 00463
Advent	00761, 01570
Affinity	03717, 03716, 03870, 03577
Aiwa	01362

Akai	00702, 01675, 00812, 01385, 00672, 01935, 00765
Alfide	00672
America	04179
America Action	00180
Anam	00180
AOC	01589, 03720, 01365, 02014, 04170, 02087, 02402, 01590, 02479, 02621, 04184, 04185, 03707, 04101, 04169, 04173
Aomni	01623
Apex Digital	00765, 02397, 00748, 01217, 00890
Ario	02397
Astar	01738, 01531
Asus	03340
Atvio	03638, 03636, 03653
Audinac	00180
Audiovox	02413, 01865, 00180, 01564, 01868, 01276, 01766, 01769, 02121, 03065, 00451, 00623
Auria	02087, 02014, 02277
Aventura	00171
Baysonic	00180
Bell & Howell	00154
BGH	04029, 00898, 04070, 02414, 00876, 03485, 04028, 04030
Blue Sky	02153, 03997
Bradford	00180
Britânia	02414
Broksonic	00463, 01935, 01938, 01892
CCE	03782, 04091, 00623, 04092
Celera	00765
Champion	01362
Changhong	03814, 00765
Cineral	00451
Citizen	01935
Clarion	00180

Claris	03807
Coby	03478, 03627, 02315, 02344, 02306, 02314, 02345, 01634, 02338, 02326, 02340, 03629, 01538, 02347, 02348, 03202
Commercial Solutions	01447
Contec	00180
Contex	04053
Continental	01682, 03321, 04179
Continental Electric	03322, 03321
Coradir	02844
Craig	00180, 03423
Crown	00180, 00672
Crown Mustang	00672, 00898
Curtis	03577, 02855, 03121, 02466, 02352, 03895, 02397, 03939, 01326, 03636, 04035, 01314, 02559, 03228, 03382
Curtis Mathes	00451, 00702, 01661, 00093, 00145, 00154, 01347
CXC	00180
Cytron	01326
Daewoo	01661, 00623, 00451, 00661, 00672, 00154
Daytek	02241
Dell	01403, 01863, 01264
Denon	00145
Digital Lifestyles	01765
Disney	01892, 01665
Dukane	01398
Dumont	00017
Durabrand	00463, 00171, 01570, 01665, 00178, 00180
Dynex	02049, 01463, 02184
Electrograph	01755, 01623
Electrohome	00463, 01570, 01670
Electron	02466, 02855

Elektra	00017, 01661
Element	03559, 01687, 02183, 02964, 01886
Elite	03867
Emerson	01864, 01394, 03623, 00171, 00463, 01963, 00180, 01913, 01886, 00178, 01944, 00623, 01661, 01665, 02183, 00451, 00154, 03559
Emprex	01765
Encross	00876
Envision	01589, 01365, 02087, 02014, 02621
Epson	01122
Epworth	01362
EQD	02014, 02087, 02277
EQD Auria	02014, 02087, 02277
ESA	00812, 00171, 01944, 01963
Fair Mate	01326
Favi	03382
Fisher	00154, 01362
Fluid	02964
Frigidaire	02231
Funai	01864, 00171, 00180, 01271, 01394, 01963
Futuretech	00180
Gateway	01755, 01756
GE	00451, 01547, 01447, 01347, 00051, 00178, 00765
General Electric	00451, 01547, 01447, 01347, 00051, 00178, 00765
GFM	00171, 01665, 01963, 01886, 01864, 01865
Gibraltar	00017
GoldStar	00178
GPX	03980, 03977, 03196
Gradiente	01369, 01029
Grundig	00672
Grunpy	00180

Haier	01749, 02309, 01748, 03382, 01753, 03429, 02293, 02876, 03987, 04120, 01570, 03204
Hallmark	00178
Hannspree	01348, 02786, 01351
Harvard	00180
Havermy	00093
H-Buster	03620, 03419
Helios	00865
Hello Kitty	00451
Hewlett Packard	01642
Himitsu	04179, 00180
Hisense	03519, 02183, 01660, 02098, 01314, 00748, 03382, 04029
Hitachi	01643, 03644, 00145, 01145, 01345, 03639, 02433, 03697, 00679, 02215, 02981
Hitech	01682, 01814, 04179, 04183
Hiteker	03118
HP	01642
Hyundai	03418, 01814
iLo	01665, 01684, 01990, 01463, 01286, 01394
Imperial	04183
Initial	01990
Insignia	02049, 01641, 01564, 01326, 02002, 01423, 01892, 01517, 00171, 00463, 01385, 01660, 01963, 02184, 02416, 02751, 03227
Inteq	00017
iRIS	02189
IRT	00451, 01661
iSymphony	03429, 03382, 03118, 03094, 03863
JC Penney	01347, 00051, 00178, 00156
JCM	02189, 02256
Jensen	01326, 03204, 00761

JVC	01774, 01601, 02321, 02271, 01253, 00053, 03650, 00463, 01670, 03841, 04070, 02264, 00650, 01892
KC	04182
KDS	01498, 01687
KEC	00180
Ken Brown	04056, 04099
Kioto	00785
KLH	00765
Kolin	01240
Konka	01939, 01385
Kreisen	00876
KTV	00180
Legend	02397, 02309
Lexus	03638
LG	02731, 01423, 01859, 02358, 00178, 03941, 03397, 04017, 02424, 01265, 03979, 01753, 00017
LodgingStar	03147
LXI	00154, 00156, 00178, 00017, 01347
MAG	01687, 01498
Magnasonic	01913
Magnavox	01866, 03623, 02372, 02597, 01454, 01913, 01944, 01963, 01455, 01990, 03708, 00171, 01365, 00051, 01755, 01867
Magnum	04179
Marantz	01398, 01454
Matsushita	00051, 00250, 00650
Maxent	01755, 01757
MB Quart	01868
Megatron	00145, 00178
Memorex	00463, 01570, 01670, 01938, 00178, 01892, 01665, 00150, 00154, 01687, 01924, 01927
MGA	00150, 00178

Microsonic	01326, 02483, 03328, 03419, 03679
Midland	00017, 00051
Mintek	01990
Miray	03847, 02414, 02429, 03183, 04176, 04177, 01814, 03322, 00785, 03485, 04178, 00898, 03309, 03321
Misakai	00171
Mitsubishi Electric	01250, 00150, 00178, 01797, 00093
Mitsui	04179, 03658, 03638
Motorola	00093
Multitech	00180
NAD	01156, 00156, 00178
Naxa	02104, 04093, 03154, 03382, 03423
NEC	01797, 01704, 01398, 00876, 02293
NetTV	01755
New Acoustic Dimension	01156, 00156, 00178
NEX	01814
Nexus Electronics	02183
Nikko	00178, 00017, 01347, 00154, 00156
Nimbro	02104
Noblex	01362, 03697, 04029, 03803, 04030, 00154
Norcent	01365, 01589, 00748, 01590
Nordmende	03419, 03861, 03134, 03327, 03767, 03835
Norwood Micro	01286
NuVision	02158
Ölevia	01610, 01240, 01331, 01144
Onwa	00180
Optimus	00250, 01927, 01913, 01924, 00154, 00650, 00679
Optique	02189

Optonica	00093
Orion	00463, 01463, 01938, 03485, 01892, 03540, 03650
Panasonic	01480, 01291, 00250, 00650, 02264, 00051, 01927, 01947, 01636, 01924, 01941, 03825, 00053, 00093, 00145, 00150, 00154, 00156, 00178, 01271, 01347
Panavideo	03679
Panavox	04057
PARK	02104
Penney	01347, 00051, 00178, 00156
Philco	03426, 02414, 03639, 03697, 01665, 00171, 01029, 01271, 01963, 01394, 01661, 00145, 01362, 00463
Philips	01867, 02372, 01454, 01455, 02374, 02597, 02708, 01744, 01866, 02622, 00690, 00017, 03623, 00171, 01944, 01365, 01990, 01394, 01589
Pioneer	01457, 00679, 01260, 01398
Planar	00679, 01589
Polaroid	01523, 01769, 01498, 01276, 01538, 01385, 01767, 03942, 04035, 01687, 02121, 00765, 00865, 01314, 01766, 04074, 01286, 01326, 02002
Portland	01661, 00451
Prima	01753, 00761, 01749
Prism	00051

Proscan	02183, 03382, 03577, 02256, 01447, 03332, 03717, 03895, 03939, 01347, 02147, 02746, 03429, 03636, 04035
Proton	00178
Proview	01687, 01498
Pulsar	00017
Pyle	02196
Pyle Home	02196
QuantumFX	02337
Quasar	00051, 00250, 01291, 01927, 01924, 03899, 00650
RadioShack	00180, 00178, 00154
RCA	02746, 02932, 02434, 01447, 04214, 02247, 03577, 01781, 02187, 03382, 01547, 01347, 03717, 03332, 00679, 02403, 01661, 02429, 03147, 03378, 03419, 00093, 01385, 01868, 02002, 02183, 02855, 03938, 03939, 00051, 00090, 03121, 03636, 04093
Realistic	00154, 00180, 00178
Recco	03847, 00898, 01814, 03183
RevolutionHD	01623
Runco	01398, 00017
Sampo	01755
Samsung	02051, 00812, 01632, 03993, 00702, 00766, 00650, 00178
Sansei	04030, 00451
Sansui	00463, 01892, 03540, 01670, 01935, 01463, 03564, 01938, 01409, 04053, 03377, 00171, 03559
Sanyo	01142, 01362, 00154, 03488, 03697, 03861, 00799, 00088

Sceptre	03899, 02528, 02337, 01217, 01360, 04139, 00878
Scotch	00178
Scott	00178, 00180
Sears	00154, 00156, 00171, 00178, 01547
Seiki	03953, 02964, 03559, 03560, 00178
Seiko Epson	01122
Seleco	01351
Semivox	00180
Semp	01743, 00156
Semp Toshiba	01743, 03793, 03469, 00156
Sens	01865
Serie Dorada	03814
Sharp	02360, 00818, 02951, 03394, 01602, 02402, 03867, 00093
Sheng Chia	00093
Sigmac	03477, 03423
Silo	03794, 03477, 04182
Silo Digital	03794, 03477, 04182
Síragon	04057
Solé	01623
Soneview	04179
Sony	00810, 01300, 01685
Soundesign	00178, 00180
Soyo	01520
Spectroniq	01498, 01687
Speler	04041
Squareview	00171
SSS	00180
Starlite	00180
STI	03793
SunBriteTV	02337, 01610, 02528
Superscan	00864, 01944, 00093, 00171
Supersonic	03593, 03154, 01753, 02104, 03595, 03204, 03894
SVA	00748, 00865, 01963

Sylvania	01864, 01886, 00171, 01963, 01944, 01913, 01394, 01665, 01271, 01314
Symphonic	00171, 01913, 01944, 01963, 01394, 00180
Syntax	01610, 01240, 01144, 01331
Tandy	00093
Tatung	01286, 01756
TCL	02434, 03183, 02429, 03426, 03847, 04176, 04177, 02414, 03047, 00898, 02403, 04178
Technics	00051, 00250, 00017, 01347, 00650
Techwood	00051
Teknika	00180, 00150
Telefunken	02414, 00702, 04025
TMK	00178
TNCi	00017
Tophouse	00180
Toshiba	01524, 01656, 02724, 00156, 03134, 01156, 01256, 02006, 01935, 01945, 02684, 01743, 03469, 01704, 00650, 01369, 01265, 00093, 00154
TruTech	01665, 01723
TVS	00463
Upstar	04182
US Logic	01286
Venturer	01865, 01868
Victor	00053
Vidikron	01398
Vidtech	00178
Viewsonic	02014, 02087, 03706, 00864, 01330, 01627, 01640, 01755, 02049, 02111, 02277, 00885, 01542, 01564, 01578, 01742, 01365

Viore	02352, 03382, 03118, 03429, 02104, 03863, 03094, 01684, 03594, 03154
VisionQuest	03154
Vivitek	01369
VIZIO	01758, 03758, 02707, 02757, 03415, 02512, 01756, 00864, 00885
Vuon	03418
Wards	00178, 00017, 00156, 00051, 01156, 01347, 00154, 00180
Waycon	00156
Westinghouse	01712, 03579, 03382, 00885, 01300, 03949, 02293, 03094, 03470, 00889, 00890, 01282, 02397, 03908, 00451, 00463, 01217
White Westinghouse	00623, 01661, 00463, 01913
Wyse	01365
Xoceco	01753, 00761, 01749
Zenith	00017, 00178, 01145, 01265, 01859, 01423, 00145, 01661, 02731, 01365, 02358, 00463
TV COMBO	
Admiral	00463
Advent	01570
Affinity	03870, 03717
Akai	01675, 01935
America Action	00180
AOC	04173
Apex Digital	00765
Astar	01531
Audiovox	01865, 02413, 00180, 01766, 01769, 03065, 01868
Blue Sky	02153
Broksonic	00463, 01935, 01938
Citizen	01935

Coby	02315, 02344, 03627, 02340, 01538, 02347, 03202, 02314
Continental Electric	03321
Coradir	02844
Curtis	02855, 03895, 02466, 04035, 02559, 03636
Daewoo	
Durabrand	00463, 00171
Dynex	02049, 02184
Electrohome	01670
Element	02964
Emerson	01886, 01864, 01963, 01913, 00463, 01944, 01394, 00171
ESA	01944, 01963
Favi	03382
Funai	00171, 01394, 01963
GE	00051
General Electric	00051
GFM	01963
GoldStar	00178
GPX	03980, 03977, 03196
Haier	01753, 02309, 03429, 01749, 01748
Hisense	03519
Hitachi	03644
iLo	01990
Initial	01990
Insignia	02049, 01641, 01963, 02002, 02416, 02751, 03227, 01326, 01517, 01892
iSymphony	03429, 03094
JVC	02271, 01601, 01670, 01774, 01253
Ken Brown	04099
Konka	01939
LG	02731, 01423
LXI	00154
Magnasonic	01913

Magnavox	02597, 01913, 01963, 01944, 02372, 01866, 03708, 01454, 00051, 01990
Memorex	01938, 00463, 01670, 01924, 01927
Mintek	01990
Mitsubishi Electric	00093, 00150, 00178
Naxa	02104, 03382
Nikko	00154
Nimbro	02104
Nordmende	03835
Optimus	01927, 01913, 01924
Orion	01938, 01463
Panasonic	01927, 01947, 01924, 01941, 00250, 01291, 01636, 01480, 00051, 00093, 00178, 03825
Philco	01963
Philips	02597, 01394, 01455, 02372
Polaroid	01769, 01523, 01538, 03942, 01766, 04074, 02002
Prima	01753
Proscan	02256, 03895, 03429, 03636
Pyle	02196
QuantumFX	02337
Quasar	00051, 01927, 01924, 00250
RCA	04214, 02187, 02746, 02932, 02247, 00093, 01868, 02002, 03382, 00051, 01447
Samsung	02051
Sansui	01670, 01935, 03564, 01938, 03377
Sanyo	03488
Sceptre	02528, 04139, 02337
Sens	01865
Sharp	00818, 00093, 02360
Superscan	01944

Supersonic	03593, 01753, 02104, 03595, 03894
Sylvania	01963, 01944, 01913, 01886, 01864, 01394
Symphonic	01913, 01944, 01963
Toshiba	02006, 01935, 01945, 02684, 03469, 01524, 00156, 01256, 01656
Venturer	01865, 01868
Viewsonic	02049, 00864
Viore	03429, 02352, 03094, 02104, 03382, 03118
Westinghouse	01300, 01712
White Westinghouse	00463, 01913
Xoceco	01753
Zenith	00017, 00178
VIDEO - VCR	
Humax	20739
Philips	20739
TiVo	20739
VIDEO - DVD	
Accurian	20675, 21416
Alco	
Allegro	20869
Amvox	22840
Apex Digital	20672, 20717
Asahi	22615
Audio Authority	22555
Audiovox	20717
BBK	21224
Bel Canto Design	21571
Blaupunkt	20717
BuBuGao	21224
California Audio Labs	20490
Cinea	20831
CineVision	20833, 20869
Coby	22494, 22746, 21351, 20672
Cougar	22693
Craig	20831
Curtis	22235, 23052
Curtis Mathes	22331, 23925

Daewoo	20833, 20869
Days	22857
Denon	22258, 22748, 20490
DigitalMax	21738
Diplomat	22814
Directed Video	20717
Disney	20675, 21270
Durabrand	23464
Dynex	22596
EletroVision	22822
Emerson	20675, 22213
Fisher	20670
Funai	20675
Gateway	
GE	20717, 20522
General Electric	20717, 20522
GFM	20675
Go Video	20869, 21044, 20741, 21075, 20744, 20833, 20717
GoldStar	20741, 20869
GPX	22235
Greenhill	20717
Grundig	20539
Harman/Kardon	20702, 20582, 21229, 22927, 23228
Hello Kitty	20831
Hitachi	20664, 20573
Hiteker	20672
Initial	20717
Insignia	22596, 22095, 22428, 20675, 21013, 20741
Integra	22147, 21769
Irradio	20646
JBL	20702
JVC	22365, 22855, 20623, 21164, 20867, 21602
Kawasaki	
Kenwood	20534, 20490
KLH	20717
Konik	22691
Lenoxx	22213
Lexicon	22545
LG	21602, 20741, 20869, 22135

LiteOn	21738, 21416
Logitech	22639
Magnavox	20675, 21354, 20503, 20646, 23488, 21506, 20539
Marantz	22481, 20539, 22414, 23444
McIntosh	21273
Memorex	22213, 20831, 23153, 21270, 22331
Microsoft	22083, 22627, 20522
Mintek	20717
NAD	20741
Naxa	22235
Nesa	20717
New Acoustic Dimension	20741
NKS	22834
Ölevia	22331
Onkyo	22147, 21627, 20503, 21769
Oppo	22545, 21224
Panasonic	21641, 23641, 20490, 21579, 20703, 20503
Philco	20675,
Philips	22056, 22434, 20646, 21354, 20539, 21506, 23488, 20503, 22084, 20675
Pioneer	22442, 22854, 21571, 20142, 20631
Polaroid	21013
Polk Audio	20539
Presidian	20675, 21738
Proceed	20672
Proscan	20522
RCA	20522, 21013, 22919, 22587, 22213, 20717, 22871, 21769, 23464
RE-BL	22555
Rio	20869
Rotel	20623

Samsung	20199, 20573, 22069, 21075, 21573, 21470, 22113, 22269, 22369, 22329, 22489, 21044, 22843, 22556, 20744, 20490
Sanyo	20670
Schneider	20646
Semp	20503
Semp Toshiba	20503
Sensory Science	
Sharp	20630, 22250, 20675
Sherwood	23052, 23837, 23925
Sonic Blue	20869
Sony	21516, 21633, 21033, 20864, 21070, 20772
SV2000	20675
Sylvania	20675
Symphonic	20675
TCL	22587
Teac	
Technics	20490, 20703
Toshiba	23157, 22705, 20503, 23857, 22277, 22006, 21510, 21769, 21608
TruTech	20675
Urban Concepts	20503
Venturer	
VIZIO	22563
Vtrek	22587
WB Electronics	22555
Xbox	22083, 22627, 20522
Yamaha	22298, 20497, 20539, 20545, 20490, 21354, 20646, 23837, 21416
Zenith	20741, 20869, 20503
BLU-RAY DISC	
Curtis Mathes	22331, 23925
Denon	22258, 22748
Harman/Kardon	22927, 23228
Insignia	22596, 22428, 20675
Integra	22147

JVC	22365, 22855
Lexicon	22545
LG	21602, 20741
Magnavox	20675
Marantz	22414, 23444
Memorex	22331
Microsoft	22627
Ölevia	22331
Onkyo	22147
Oppo	22545
Panasonic	21641, 23641
Philips	22434, 22084
Pioneer	22854, 22442, 20142
RCA	23464
Samsung	20199
Sharp	22250
Sherwood	23052, 23837, 23925
Sony	21516, 20772
Sylvania	20675
Toshiba	23157, 23857, 22705
VIZIO	22563
Xbox	22627
Yamaha	22298, 23837